

# NIAGARA 5000UK

## Low-Z Power | Noise-Dissipation System

### Quick-Start Guide




The Niagara 5000UK owner's manual contains considerable information to ensure optimal performance, troubleshoot both common and rare system interactions, and is a great primer to the technology that makes this unit so unique. However, we appreciate and respect your valuable time. At the very least, we humbly ask that you follow this quick-start guide.


- If the Niagara 5000UK has been exposed to excessive rain, flooding, fire, or has sustained considerable physical damage, we ask that the unit be returned. Do not attempt to energize the unit or connect equipment to it!
- The power source to which the Niagara 5000UK is connected should be 230-265VAC single phase nominal voltage, 13 amps (current capacity RMS). For proper operation, the Niagara 5000UK requires a safety ground (supplied via the power utility AC wall outlet).
- The Niagara 5000UK may be placed on any table, cabinet, shelf, or floor. When rack-mounting is required, the four threaded feet may be removed with a standard Phillips screwdriver.
- Placement or proximity to other components is not critical, and, under standard use, the Niagara 5000UK does not produce any appreciable heat.
- Once the Niagara 5000UK is placed, an appropriate 13- to 16-amp-rated AC cord must be connected to the rear-panel AC inlet (IEC-C20) connector. The AC cord must have an IEC-C19 female-end connector and a grounded male 240VAC UK-1 13P plug for use in EU, Russia, or other countries that require this outlet. For the best performance and proper Ground-Noise Dissipation, we recommend AudioQuest AC cords
- **High-Current/Low-Z Power Banks:** There are three High Current/Low-Z Power outlets (labeled "1," "2," and "3"). The outlets feature our Transient Power Correction Technology and are designed to enhance the performance of power amplifiers via our circuit's low-impedance transient current reservoir. Power amplifiers, monoblock amplifiers, integrated amplifiers, powered receivers, or powered subwoofers should **only** be connected to these three outlets.
- **Power Correction Switch:** This rear-panel-mounted switch **MUST** be set in the **ENGAGE** position, regardless of the equipment (line-level, digital, video components, or power amplification) that is connected to the Niagara 5000UK. It may not function properly otherwise. If necessary, see user manual set-up for more detailed information. (Otherwise, please place this switch in the **ENGAGE** position.)
- **Level-X Ultra-Linear Noise-Dissipation System Power Banks:** Typically, these are for all line-level, digital, and video products. There are four banks (comprising outlet groups 4/5, 6/7, 8/9, and 10/11) that utilize this technology within the Niagara 5000UK. Further, each outlet group employs ground-noise isolation that is independent from the others.
- **I hear a slight buzzing sound coming from the Niagara 5000UK. Is it damaged?** No, it's not damaged (or, at least, damage is **very** unlikely). If you're in an extraordinarily quiet room and you hear this buzzing sound only when in relatively close proximity to the Niagara 5000UK, or only when you place your ear next to the unit, the buzzing is normal and cannot be entirely eliminated (though easily detectable levels are rare). See the Niagara 5000UK manual for detailed information about high-level harmonic AC line distortion and its ability to make some of the circuits suffer from mechanical ringing, or *magnetostriction*.

# Suggested AC Connections

1

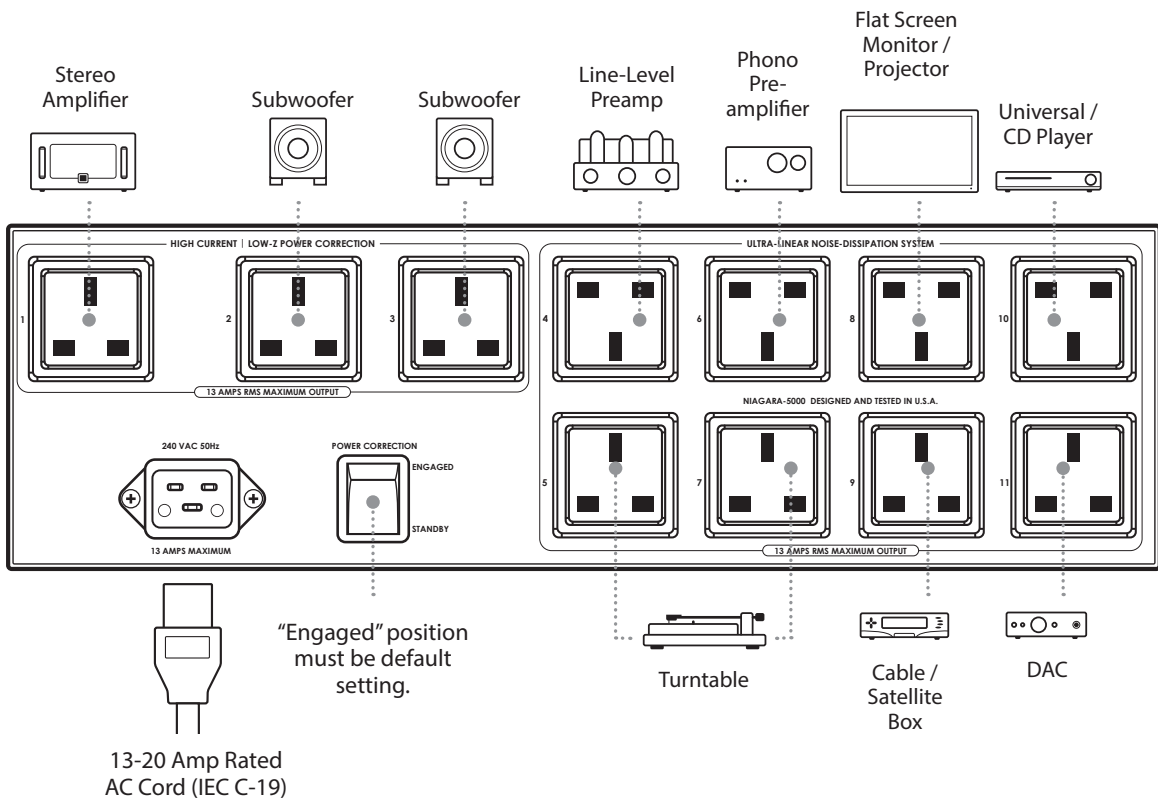

2

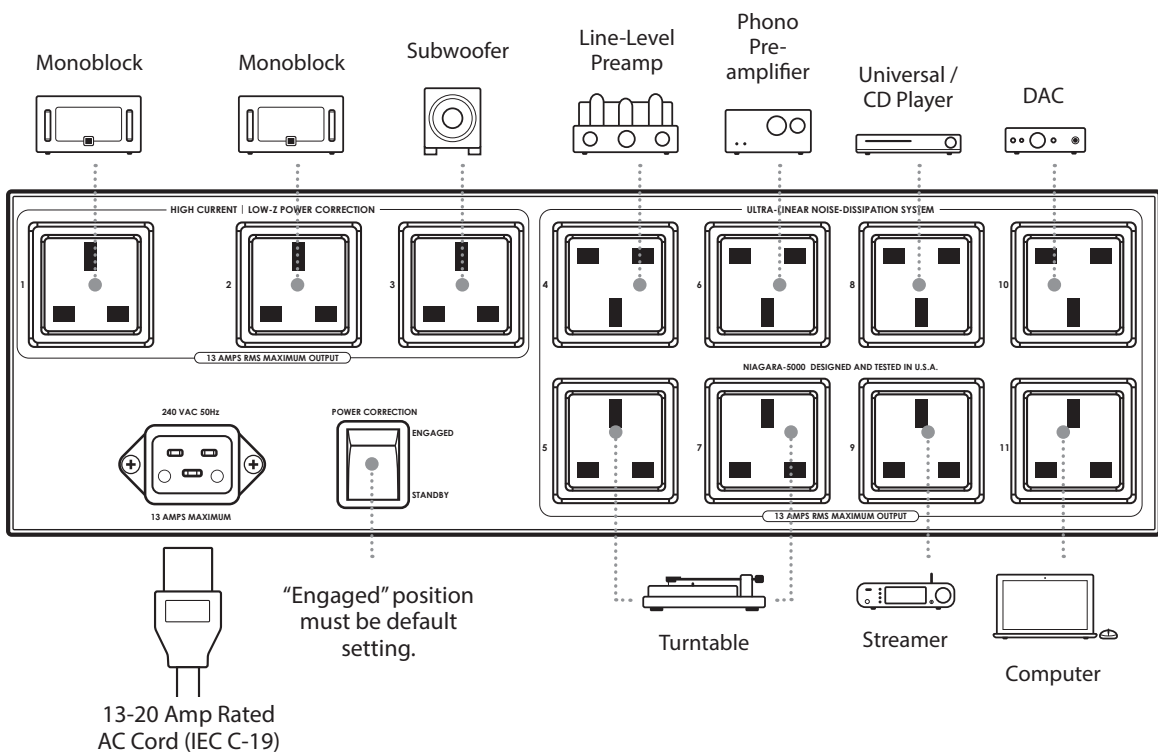

**Note:** Outlets 4 through 11 are subject to many variables and circuit conditions, so experimentation for best results is encouraged. Power amplifiers **must** be connected to Outlets 1 through 3.